





User Guide Adjustments





Nightingale Corp. T 1.800.363.8954 F 1.800.637.6784 www.nightingalechairs.com info@nightingalechairs.com



Fixed nylon arms.



B SEAT DEPTH ADJUSTMENT

To adjust seat depth, turn knob counter-clockwise to loosen, pull back out to desired depth, turn knob clockwise tightly to lock in position



C TENSION KNOB

Turn knob clockwise to increase tension, turn counter-clockwise to decrease tension.



PNEUMATIC HEIGHT ADJUSTMENT

To lower, turn the lever while seated. To raise, turn lever with your weight off the seat.